




IINSTRUCTIONS FOR PORTABLE GAS STOVE

- **IMPORTANT:** Read these instructions for use carefully so as to familiarize yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference. **USE OUTDOORS ONLY.**

NAME OF PARTS

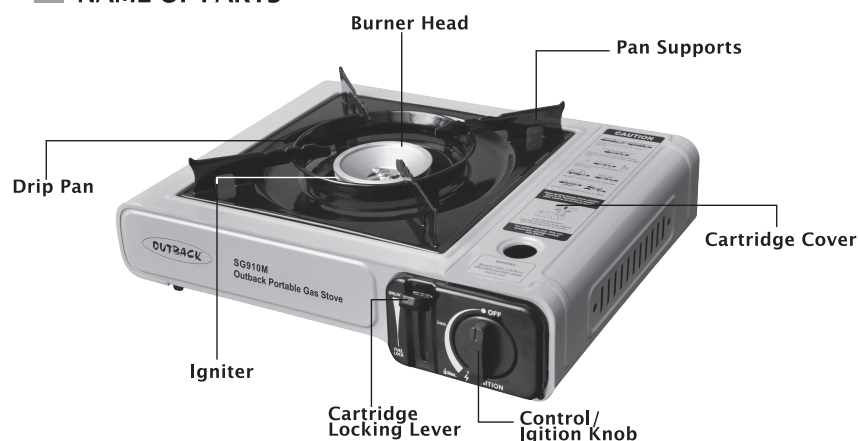

TECHNICAL CHARACTERISTICS

Model No.: SG910M Product Code No.: OUT370019
 Type of Gas: Butane Appliance Category: Vapour pressure butane
 Nominal heat input: 2.2kW Gas consumption: 160g/h
 Approval Number: MB 69242138 0001
 Orifice diameter: Ø 0.6mm
 Pressure range of overpressure shut-off device: 4.0bar ~ 6.0bar
 Outlet pressure of the valve: 7.65kPa



WARNING

BEFORE INSERTING A CARTRIDGE, ALWAYS ENSURE THAT THE PAN SUPPORT/DRIP TRAY HAS BEEN TURNED AND PLACED IN THE UPRIGHT AND CORRECT POSITION.



CORRECT



UPSIDE DOWN (PACKED)



REMOVED



WARNING


BEFORE LIGHTING THE COOKER, ALWAYS ENSURE THAT THE PAN SUPPORT/DRIP TRAY HAS BEEN TURNED AND PLACED IN THE UPRIGHT AND CORRECT POSITION. Operating this appliance with the pan support in the down(storage/transportation) position will cause the appliance to overheat and possibly explode.

IMPORTANT

This appliance shall only be used with the OUTBACK 220g butane cartridge. IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CONTAINERS. * REMOVE ANY TRANSIT PROTECTION MATERIAL.

FITTING THE GAS CARTRIDGE


1. Make sure the Cartridge Locking Lever is in the "UNLOCK" position or the gas cartridge can not be installed. Make sure the Control Knob is turned all the way clockwise to the "OFF" position. (Fig.1)
2. Open the Gas Cartridge Cover and insert the cartridge so that the regulator guide is aligned with the notch in the cartridge rim. (Fig.2)

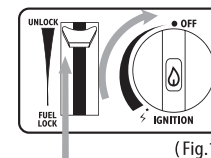


(Fig.1)

Check that the seals between the appliance and the gas cartridge are in place and in good condition before connecting the gas cartridge.

- DO NOT use this appliance if it has damaged or worn seals.
- DO NOT use this appliance if it is leaking, damaged or does not operate properly.

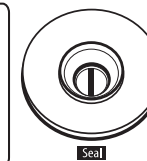

Seal

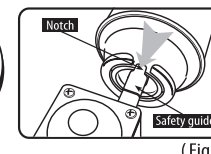


(Fig.2)

3. Push down on the Cartridge Lever to the "FUEL LOCK" position. (Fig.3)

NOTE: If the gas cartridge is not connected correctly, you will hear a hissing sound. If you hear a hissing sound, check for any leaks by using soapy water. Never use a flame. Bubbles would indicate a gas leak.

CAUTION: When connecting or disconnecting the gas cartridge, be sure that no external sources of ignition are present.

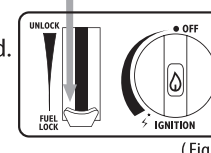


(Fig.3)

LIGHTING THE STOVE

NOTE: Close the Cartridge Cover before lighting. Not closing the cover can cause the cartridge to overheat.

- Turn the Control Knob counterclockwise until you hear a click indicating that a spark has been produced. (Fig.4)
- If the stove does not light, turn the Control Knob back to the OFF position and repeat.
- If after three failed attempts, the stove does not light, turn the Control Knob to the "OFF" position and move the cartridge lever to the "UNLOCK" position.
- Open the cartridge cover and remove the cartridge. Shake the cartridge to see if it is empty. If empty, replace the cartridge and begin from Fig.1

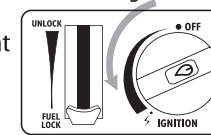

(Fig.4)


TO ADJUST HEAT

Flame can be controlled by turning the Ignition Knob between the 'IGNITION' and 'OFF' position.

EXTINGUISHING

1. Turn the Ignition Knob to 'OFF' to shut off fuel supply (Fig. 5). Wait until the flame is fully extinguished before performing the next step.
2. Raise the Cartridge Lock Lever to 'UNLOCK' and remove the gas cartridge from the compartment. (Fig.1)

Check that the burner is extinguished before disconnecting the gas cartridge. Note: Do not leave the gas cartridge inside the unit when not in use.

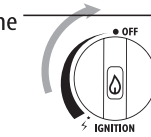

(Fig.5)

AFTER USE


1. Replace the cap on the gas cartridge after removing it from the unit. Store upright in a cool dry place.
2. Make sure the burner is cool to touch before packing unit away.

THE AUTOMATIC SAFETY SHUT-OFF DEVICE ACTIVATION

- When used in high temperature areas, such as the beach during summer or in a hot room, the internal pressure of the cartridge may rise to more than 5-6Kg/cm² (normal pressure = 2-3Kg/cm²) This will activate the Automatic Safety Shut-off Device inside the regulator.
- Remove the Gas Cartridge from the compartment.
If the stove had been in use and was working properly, the butane can should be cold to the touch. If it is not and feels warm, go back to the "Precautions" on the Stove Use section and confirm if you are using the stove correctly.
- Turn the Ignition Knob to 'IGNITION' to release any excess gas inside the regulator.
Repeat the 3 steps for inserting the gas cartridge after it has cooled down.


MAINTENANCE AND CAUTIONS

- Never leave the stove unattended when hot or when in use.
- Do not modify the appliance.
- CAUTION: accessible parts may become very hot.
Keep young children away from the appliance at all times.
- Keep the stove area clear and free of combustible materials, gasoline and other flammable vapors and liquids.
- Do not obstruct the flow of ventilation and combustion air around the appliance.
- Keep your stove clean using a stiff brush to clean the burner head.
- Use a soft cloth to clean greasy parts of the stove with soap and water.
- Keep the igniter and the burner head gap free from debris for easy lighting.
- Clean stove frequently to avoid grease build up and as necessary.
- Burner flame should be blue with hint if yellow tip.

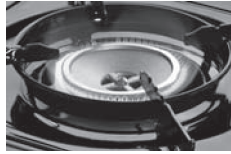


FIRE HAZARDS

- Never store butane near high heat, open flames, direct sunlight, or any location that can exceed 40°C.
- Never install or remove butane cartridge while the stove flame is ignited or near any source of ignition such as another stoves in use, pilot lights, chafing dish fuels or any open flame or spark.
- During operation, this appliance can also be a source of ignition. Do not use near explosive or combustibles such as gasoline, paint thinner, explosive vapors or other cans of butane.
- The appliance shall be away from flammable materials.
MINIMUM DISTANCES FROM ADJACENT SURFACE:
REAR 60cm - SIDE 60cm - CEILING 100cm.
- For use on non-combustible surfaces.

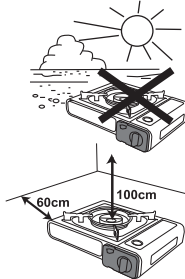







PRECAUTIONS FOR FUEL USE

- Check that cartridge is empty before changing it (shake to hear the noise made by the liquid).
- Check the seals before connecting a new gas cartridge to the appliance.
- Change the gas cartridge outside and away from people. Gas cartridge shall be changed in a well-ventilated location, preferably outside, away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people.
- Never store butane cartridge near a heat source, open flame or any source of ignition.
- Never store butane in direct sunlight.
- Never store in any closed space that may reach temperatures of 40°C.
- Keep cap cover on cartridge when not in use.

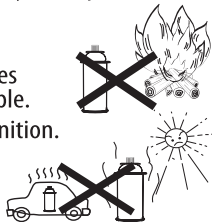

PLEASE TAKE THE FOLLOWING STOVE PRECAUTIONS

   - Do not carry the unit while it is burning. (Fig.6)
- Do not touch the unit while in use or just after use.
- Do not overheat the stove.
- Do not use for drying clothes.
- Do not use two or more stoves adjacent to each other. (Fig.7)
- Do not use as a heater.
- Never use the stove without the pan support.
- Do not use a pan larger than 260mm as can over the gas cartridge compartment and cause the gas cartridge to overheat. Strictly forbidden to use the griddle plate if the length of its any side longer than 180mm, Otherwise it has big risk of cartridge explosion caused by overheating. (Fig.8)
- Do not use two or more stoves covered by a single pan or metal sheet. (Fig.9)
- Never use aluminum foil as a cooking container on the stove.
- Never use ceramic cookware.
- The appliance must be operated on a horizontal surface.
- If sand, mud, stones or other debris are present, place a piece of non-combustible matting that is larger than the stove, on the ground and place the stove on top of the matting. This is to prevent these items from entering the stove.
- Avoid direct sunlight or other heat sources that could exceed 40°C. (Fig.10)
- Never heat an empty pan.
- Do not use in windy conditions as the flame may be extinguished. Gas will continue to flow creating a hazardous condition. (Fig.11)
- Never use the stove near flammable materials or combustible vapors. (Fig.12)
- Do not use this stove below shelves or where there is a danger of falling objects.
- If there is a leak on your appliance (smell of gas), take it outside immediately into a well-ventilated flame free location where the leak may be detected and stopped. If you wish to check for leaks on your appliance, do it outside. Do not try to detect leaks using a flame, use soapy water.
- This appliance must only be serviced by an authorised person.
In event of any problems, please contact our repair service or dealer.

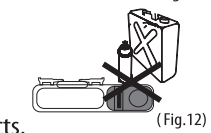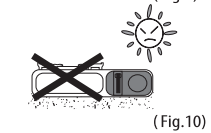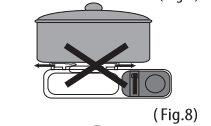

TROUBLESHOOTING

Problem	No Ignition	No Burning	Unstable Flame	Uneven Flame	Slow Burning	Gas Smell	Stopped Working while in Use	Continued Burning	Solution
Lack of fuel	●	●			●		●		Replace Cartridge
Dirty burner	●	●	●	●	●				Clean burner
Cartridge misaligned	●	●	●		●	●			Reset correctly
Internal gas pressure too high							●		Cool down gas
Improper setting of spark point	●								Set spark point to 2mm (5/64") away from burner