

OUTBACK®

Assembly and Operating Instructions for Outback® Elite Range Side Burner Shelf Set



0359

Photographs are not to scale.
Specifications subject to change
without prior notice.



ASSEMBLY

Tools Required: Medium size flat blade or Phillips/Crosspoint screwdriver, adjustable spanner or metric spanner set







Hook the Elite Side Burner Shelf to the barbecue endcaps.(1)

**Loosen the pre-assembled Brackets and Screws.
Hook the Brackets to the barbecue side shelf shield , fastening the screws.(2)**

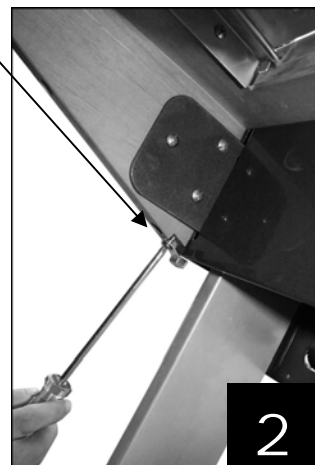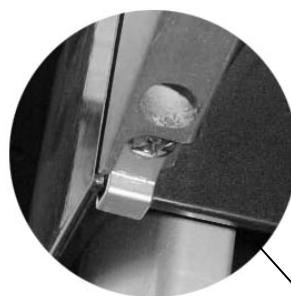

3

IMPORTANT– When fitting the hoses, ensure the mating faces of the connections are clean and not damaged. Do not use any sealing tape, paste, or liquid on the joint. The nut must be tightened with the use of a spanner. Do not use force which may damage the assembly.

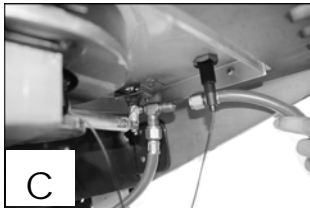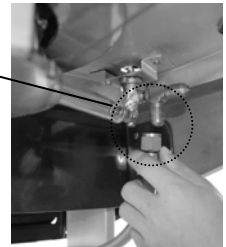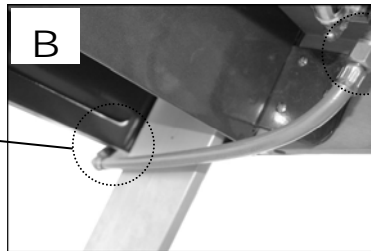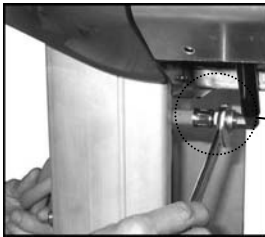

- A. Remove the existing main burner hose from the BBQ manifold.**
- B. Connect one end of the side burner hose supplied to the BBQ manifold and the other end to the side burner gas valve.**
- C. Connect the main burner hose previously removed from the BBQ manifold to the remaining connector or the side burner gas valve.**

LEAK TESTING

Confirm all control knobs are in the off position. Open the gas control valve on the bottle or regulator. Check for leaks by brushing a solution of ½ water and ½ soap over all hose connections and regulator connections. NEVER USE AN OPEN FLAME to test for leaks at anytime. If bubbles form over any of the joints, there is a leak. Turn off the gas supply and retighten all joints. Repeat test. If bubbles form again, do not use the barbecue. Please contact your local dealer for assistance. These additional connections should then be included to part of the leak testing described in the main BBQ manual.

Attention: If the BBQ is to be used without the side burner shelf, the above procedure must be reversed

LIGHTING INSTRUCTIONS

PUSHBUTTON LIGHTING

- 1 Raise side burner lid.
- 2 Turn control knob to high position.
- 3 Press starter button 3 - 4 times until burner is lit.
- 4 If burner fails to light, turn off and wait 5 minutes, then try again. If burner still does not light, see the manual side burner lighting instructions.

MANUAL LIGHTING

- 1 Raise side burner lid.
- 2 Turn control knob to high position.
- 3 Place a lit match near the burner until the burner ignites.
- 4 If burner fails to light, turn off and wait 5 minutes, then try again. If burner still does not light after repeated attempts, call your local dealer for assistance.

TECHNICAL SPECIFICATIONS

Model Name	CE Approval	Heat Input	Burners	Injector Size	Gas /Pressure
Outback® Elite Range Side Burner Shelf	0359 359BR128	2.5kW	1	0.79	Butane/ 28-30mbar Propane/ 37mbar

Countries of Use:

I_{3+28-30/37} BE, CY, CZ, EE, FR, GR, IE, IS, IT, LV, LT, LU, PT, SK, ES, CH, GB
I_{3B/P(30)} CY, CZ, DK, EE, FI, GR, LV, LT, LU, MT, NL, NO, SK, SI, SE, TR
I_{3B/P(50)} AT, DE, HU, SK, CH
I_{3B/P(36)} PL

In the unlikely event that you experience problems with this barbeque, please contact:

Customer Service
Outback UK
Unit 2 Farleigh Hill
Tovil
Maidstone
Kent
ME15 6RG
Tel: 01622 671771
Fax: 01622 673101

e-mail: customerservice@outbackuk.com



Published August 2006'